

Fig. 34 - **Dismantling of the fuel tank from the vehicle:** Act on both securing bolts and lift the tank, after having previously removed the packing of fuel cock from frame.

Fig. 35 - **Dismantling of the fuel cock from tank:** Open the filler cap, insert the wrench T.0032973 and act until the nut « D » is loosed, then remove the fuel cock from tank.



Fig. 36 - **Dismantling of the unit petrol (gas) tank - oil tank:** Act as shown in figs. 33 and 34 for lifting the fuel tank-oil tank unit. Remove the oil tank cap and introduce through the tube the wrench T.0062850 until the nut is loosed; then act on the locking collar « B » until the oil tank is released.

